



Manual for oil filling

Suggested methods to fill oil in a simalube

Material

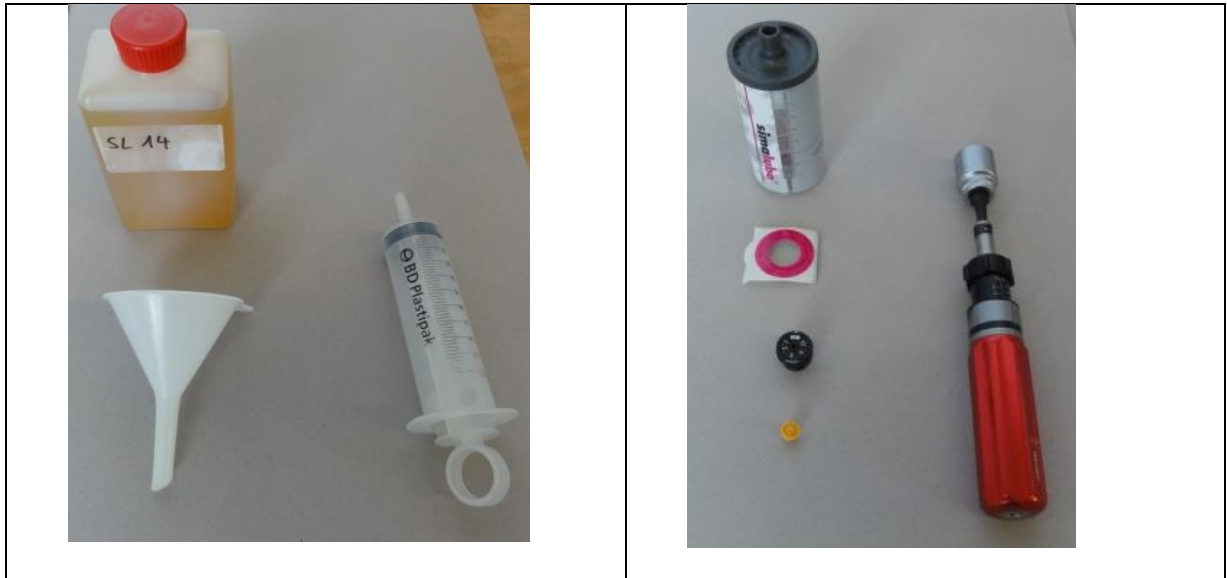

Preparation

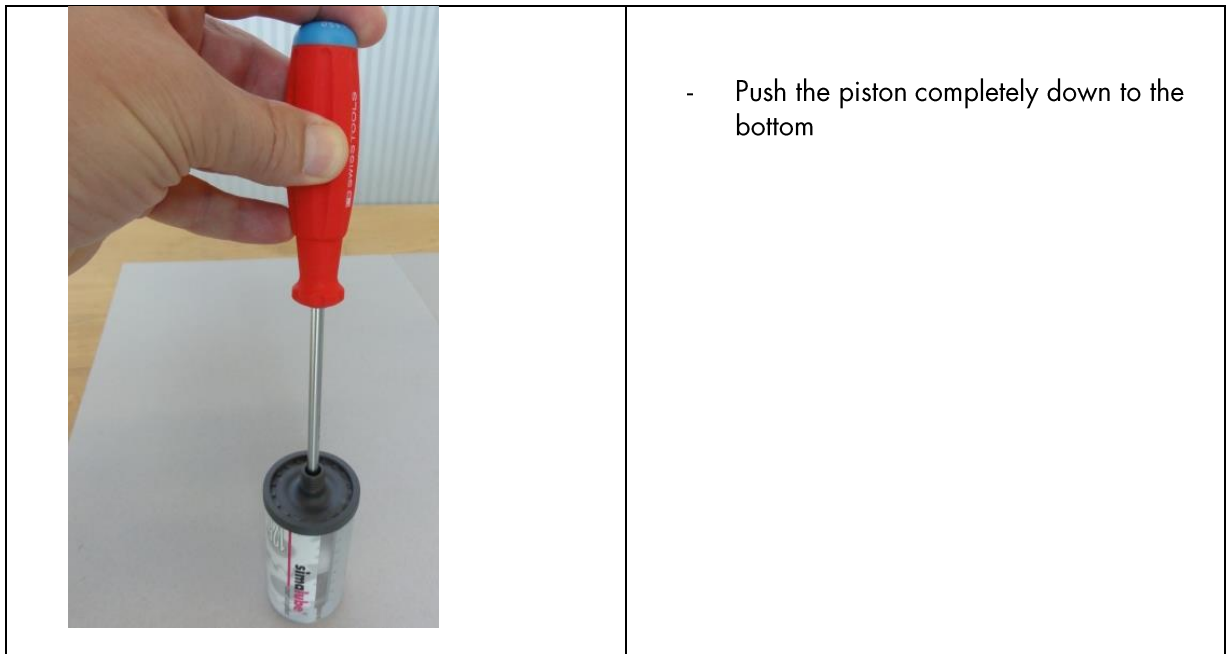

First method: use of a small funnel



- Place the funnel upon the simalube and slowly fill in the oil
- Make sure that the air in the simalube can escape

Second method: use of an oil syringe







- Mount the syringe with oil



- Fill the empty simalube
- Make sure that the air in the simalube can escape

Complete the assembly of the simalube

	<ul style="list-style-type: none">- Close the simalube with the yellow plug
	<ul style="list-style-type: none">- Insert the cartridge
	<ul style="list-style-type: none">- Tighten the cartridge by using a torque wrench, set on 1.5 Nm
	<ul style="list-style-type: none">- Position the washer over the cartridge